

# Read Me First

## HP StorageWorks Command View SDM

**Product Version:** 1.08.01

### About This Document

This document outlines the procedures to install and configure the HP StorageWorks Command View SDM software. To completely install the software, you need to:

- 1 Installing the HP StorageWorks Command View SDM Software
- 2 Configuring Security
- 3 Important Notes

## 1. Installing the HP StorageWorks Command View SDM Software

**To install the Command View SDM software on HP-UX:**

Refer to the installation steps in iInstalling Command View SDM on HP-UXi section of the Installation and User Guide on the Command View SDM CD.



---

### **To install the Command View SDM software on Windows:**

Refer to the installation steps in Installing Command View SDM on Windows section of the Installation and User Guide on the Command View SDM CD.



After installation, the Command View SDM Launcher icon will appear on the desktop.

### **To install the Command View SDM software on Linux Red Hat:**

Refer to the installation steps in Installing Command View SDM on Linux Red Hat section of the Installation and User Guide on the Command View SDM CD.

## **2. Configuring Security**

The User Security feature is installed automatically when the Command View SDM software is installed. After installation, security is disabled (OFF). After installation, the default username is “Administrator” and the default password is “administrator” (note -case sensitive).

**Important Note** - To configure security and allow administration of the array, you will need to add at least one new username (and password) that is a member of the Administrator Group.

Use ‘secadmin’ command to configure users for the GUI and ‘addcliuser’ command to configure users for CLUI. Refer to “secadmin” and ‘addcliuser’ section of the “CLUI” chapter in the Command View SDM Installation and User Guide (located on the Command View SDM CD).

### 3. Important Notes

Command View SDM 1.08.01 is released on,

- Windows 2000 AS SP4 (32 bit)
- Window Server 2003 (32-bit)
- Red Hat EL 3.0 with 2.4.21-9EL kernel (32 bit)
- HP-UX 11.00
- HP-UX 11.11 (32 bit)
- HP-UX 11.23 (64 bit)

Following files are replaced in this Release:

- CommandViewSDM/docs
- CommandViewSDM/hpux
- CommandViewSDM/linux
- CommandViewSDM/win

Note            The remaining content of this release exactly matches with the 1.07 release.

### Command View SDM Minimum Revision Level (SMI-S VA)

SMI-S VA v1.08.01 is an integrated component of Command View SDM v1.08.01.

### Known SMI-S VA Issues

- SMI-S VA does not support the following lifecycle indications:
  - CIM\_InstCreation, CIM\_InstDeletion and CIM\_InstModification for CIM\_ComputerSystem are not supported on top level computer systems.
  - CIM\_InstCreation, CIM\_InstDeletion and CIM\_InstModification for CIM\_StorageSynchronized, CIM\_ExtraCapacitySet and CIM\_ProtocolControllerForUnit and CIM\_FCPort are not supported.

### Documentation Issues

Descriptions for the addcliuser and secadmin commands have been updated in the *HP StorageWorks Command View SDM Installation and User Guide* and the *HP StorageWorks Command View SDM for Disk Systems Installation and User Guide* for the 1.08.01 release. The online help files have not been updated for this release.